



X3 PITCH TIMER

X3 Pitch Timer — Quick Start Guide

Document: 135-0297

Revised: 2026-10-06

Nevco Sports · 301 East Harris Avenue, Greenville, Illinois 62246 · 800.851.4040 · support.nevco.com

Initial Setup

If your installer has not configured your venue yet, follow the steps in the "Nevco ONE Controller Quick Start Guide" to set up your sporting event. Scan the QR code or visit:

one.nevco.com/controller/help/getting-started

Selecting Your Sport (Dual-Sport X3)

After powering on your X3, you will be asked to choose a sport before it connects to the receiver.

1. Press **Enter** at the sport prompt.
2. Press **1** for Baseball or **2** for Softball.

Your selection only affects which sport's events the X3 can **start**; you can join any active event regardless of choice.

Connecting to Your Receiver

First, it's important to familiarize yourself with the operation of the buttons.

The text in the center of a button indicates a **short press** operation.

The text shaded at the bottom of a button indicates a **long press** (hold 3 seconds) operation.

Warning: When an event configured with multiple parent/child receivers is started via the One Controller mobile app, **no X3** can join the active event. The One Controller

mobile app does not currently support adding X3 serial IDs to existing events.

1. Power on the X3: Hold the **ON/OFF** button (bottom center) for 3 seconds.

You will see the "NEVCO SPORTS ONE" splash screen.

2. Battery check: The X3 checks battery levels automatically; replace batteries if a low-battery warning appears.

3. First time connection: The X3 will attempt to connect automatically:

3a. Pre-programmed receiver: If your receiver's serial is pre-set, the X3 connects automatically and displays `Connecting to:` plus the serial number.

3b. Device Discovery: If no receiver is pre-programmed, the X3 scans for nearby receivers and displays `Searching.....`.

When the scan completes, arrow-key to your receiver and press **Enter**. If your receiver isn't listed, see **Device Discovery** in the User Manual.

4. Connecting to a different receiver: From the scoring screen, press **Options**.

Select **Options** → **Main Receiver**. The **Main Receiver** menu shows **Device Discovery** (scan) and **Manual Entry** (type serial).

a. Main Receiver → Device Discovery: press **Enter** to search, then arrow-key to your receiver and press **Enter**.

b. Main Receiver → Manual Entry: type the serial number with the keypad and press **Enter**.

5. Select your sport profile: If multiple profiles are available, arrow-key to your selection and press **Enter**.

You are now connected and ready to control your scoreboard!

Getting Started with Your Nevco Pitch Timer

Get Familiar with Your Controller

Once connected, your Pitch Timer controller displays timing information.

Here's what you'll see:

Main Display

Top line: R1: New Inning, R2: Bases Empty

Bottom line: R3: Runners On Base, R4: New At Bat

Button Functions

All timer buttons (1–4) will set the time and start the clock automatically.

If the timer sets the time, but doesn't automatically start, either press the timer button again, or press the **PLAY/START** button.

LABEL	FUNCTION
CLEAR	Returns UI to main screen. If timer was running, it will continue.

Powering Off

When the event is over, hold the **ON/OFF** button (bottom center) for 3 seconds. Choose:

Leave the event: Your event continues; another device can connect to control the scoreboard.

End the event: The game ends; the scoreboard goes blank.

Troubleshooting

X3 will not connect to the receiver: Ensure the receiver is powered on and you are within 50–650 ft of the scoreboard.

No display on the X3: Ensure batteries have capacity. If so, remove and re-insert batteries to power cycle the unit.

Connection drops intermittently: Move closer to the receiver. Check for sources of wireless interference (other wireless devices, metal structures). Ensure batteries are not low; a low battery warning may indicate insufficient power for reliable wireless communication.

"No Events Available" displayed on screen: Using the One Controller app, create an event with the sport profile for the X3's sport.

Wrong data on scoreboard:

- Verify you are connected to the correct receiver (turn off and turn back on to see which receiver is being connected to).
- Confirm the correct sport profile is selected.
- Verify Scoreboard Model matches in the receiver's settings via One Controller.

Need Help?

If you need additional assistance, our support team is here to help.

Phone	1-800-851-4040
Online	www.nevco.com/support-ticket/
Address	Nevco Service Department 301 East Harris Avenue Greenville, IL 62246

Scan to submit a support ticket